

ID Badge-holder Personal Infrared Transmitter (Badge PIT)

INSTRUCTIONS FOR USE

To prepare the Badge PIT for use:

1. Remove this card and place to one side.
2. Replace with your ID Badge.
3. Attach your preferred lanyard or key reel to the top.

Method of Operation:

1. To call for your colleagues: Press the large blue button on the reverse.
2. To check battery status: Press the small blue button on the reverse. A green LED will light in the top left-hand corner of the Badge PIT indicating that the battery is OK.
3. If a red LED lights in the top left-hand corner of the Badge PIT when operating either button, then you need to change the batteries. SEE REVERSE for instructions.

KEEP THIS CARD

TO CHANGE BATTERIES

The Badge PIT uses two 3v 2032 button cells to power it. These can be bought at most shops that sell batteries. Always change both batteries.

1. Remove your ID Badge.
2. Remove the four screws of the battery cover with a suitable Pozidriv screwdriver and place carefully to one side.
3. Remove battery cover by turning the unit over and tapping the case lightly.
4. Carefully, using a suitable implement, push the batteries from their holders. Remove and dispose of the batteries in accordance with your organisation's and local guidelines or return to Pinpoint for disposal.
5. Insert two new 3v 2032 button cells, + side upwards
6. Replace battery cover and the four screws. Do not over-tighten.
7. Replace your ID Badge.

Pinpoint Limited, Ajax Way, Methil Docks, Leven KY8 3RS, Scotland



+44(0)1333 421706



info@pinpointltd.com



www.pinpointlimited.com