

PINPOINT LTD

Protecting People at Work



EXTERNAL SLAVE RECEIVER UNIT (ANGLED BOX)

Backbox: nil

Model No. 523

These units are normally installed to cover exercise areas, car parks, secure gardens etc. and are normally SURFACE MOUNTED under eaves at the junction of walls etc.

They are connected to a Receiver Unit Controller that is located INSIDE the relevant building via external cable that is on the data loop of the system. This gives the relevant area covered its 'address' or location e.g. 'WARD 1 EXTERNAL COURTYARD' or as specified by the end-user.

This External Slave Receiver Unit is fitted into an angled box that conveniently can be installed at a high level at the junction of walls, under covered roofs etc.

As the Receiver Units are outside the building, the Personal Infrared Transmitter that is used by the staff to trigger the system has to be pointed directly at or waved in the general direction of the External Receiver Unit.

Depending on weather conditions, the Receivers can be activated by the Personal Infrared Transmitters from up to 40 metres away.