



### Getting Started with the Pinpoint 7950 Display Pager

-  - Move to previous message
-  - Move to next message
-  - Battery Indicator
-  - Message READ Key
-  - ESCAPE (back to previous menu)

Tel +44 (0)1333 421706 Fax +44 (0)1333 422757  
[www.pinpointlimited.com](http://www.pinpointlimited.com)

#### POWER ON

1. Insert the battery (AA) into the pager.  
If the battery is in, press and hold the READ key for 5 seconds.
2. The pager will display the standby screen, vibrate and then sound.
3. After a short time, the display will go blank to preserve battery power.
4. Press any key to return to the standby screen.

#### BACKLIGHT

Press and hold the read key to activate or deactivate the backlight.

#### POWER OFF

1. Go to the Standby Screen.
2. Press the ESCAPE key to display the SETTINGS Menu.
3. Using the arrow keys, scroll to TURN PAGER OFF.
4. Press the READ key twice to switch off.

#### READING MESSAGES

1. The pager will display a new message when it is received.
2. Each message is allocated a number. The most recent will be number 1.

3. To read stored messages, press the READ key from the standby screen.  
Scroll through messages with the arrow keys and press the READ key to read selected message. The memory holds the last 10 different messages received. A new message will replace the first message.
4. You will be returned to the standby screen automatically if you scroll to the end of the messages.
5. If a message is longer than the screen width, an arrow flashes in the bottom right corner. Use the READ key to view the rest of the message.
6. If a message is not read, the pager will "beep" and display  flashing arrow.

#### SETTINGS

1. Press the ESCAPE key to select the SETTINGS menu.
2. Scroll through the menu using the arrow keys.
3. Press the READ key to confirm your selection.
4. Use the arrow keys to modify options and the READ key to proceed to the next option or to enter your changes.
5. The ESCAPE key takes you back to the standby screen without saving your changes.